


MORTUARY FREEZER

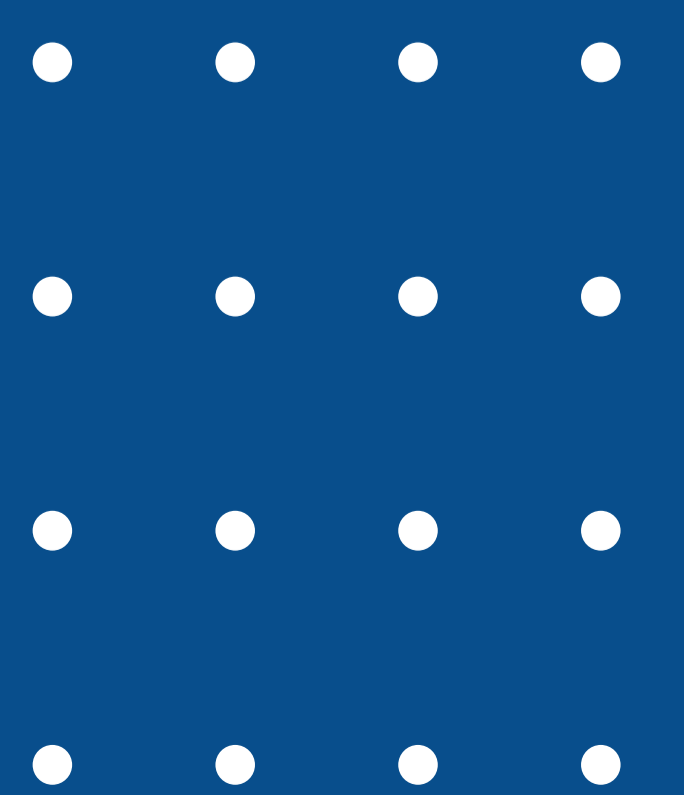


Product Overview

Mortuary Freezer

Elektro Genesis company is committed to building leading brand for “Mortuary products”. The mortuary refrigerator is the major product for mortuary line.

Mainly Characteristics:

- Drop in self-contained refrigeration system. It with digital thermometer and easy to adjust(-15°C to 5°C) temperature Controller.
- The unit ships fully assembled. Plug unit into an outlet and the unit is workable.
- Heavy-quality stainless steel material for long lasting use.
- Single door is with single control. Each room has an independent refrigeration and temperature control system.
- It has independent detachable tray.
- Safety lock and alarm function.

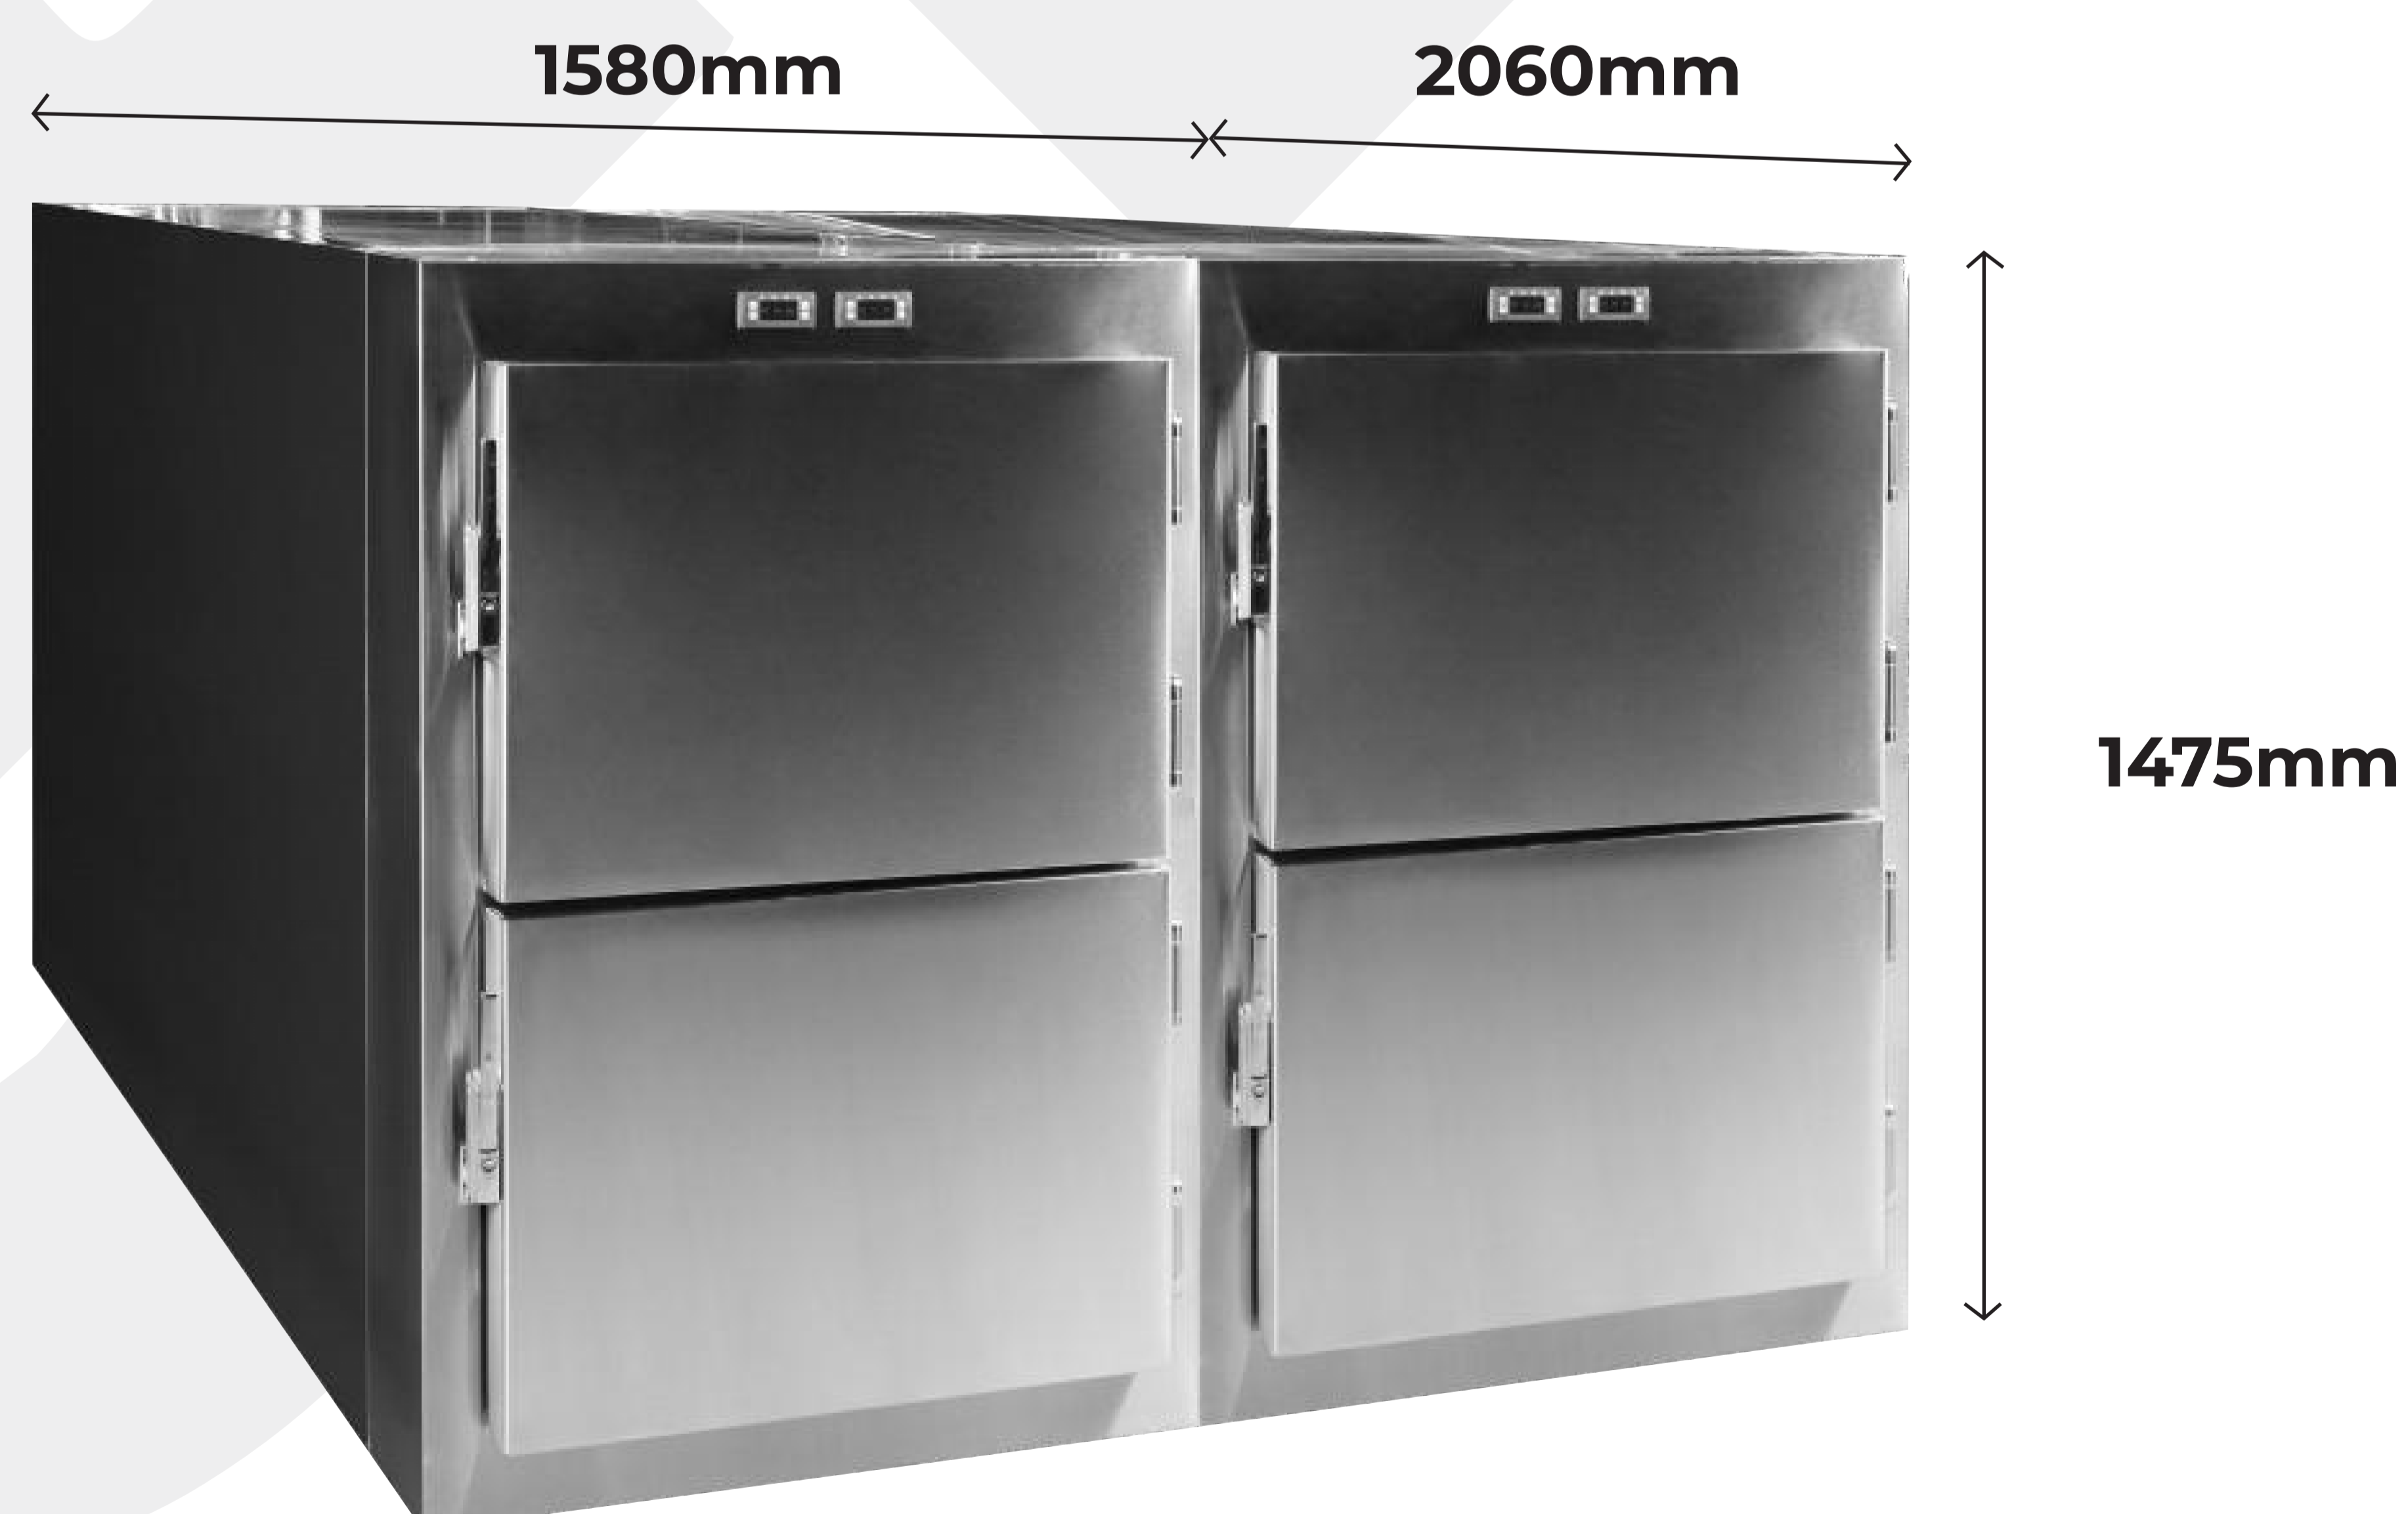

Features

Insulation Technology

- 8 cm foamed in place urethane
- It is a green/ environmental foam material.
- Disposable foam machine overall.



Cooling Quality

High quality compressor (Germany Compressor is optional) to be sure the necessary temperature.



Safety Door

- Safe door locked system, with lock keys.
- Unique door seal design for the minimum loss of cold temperature during a door opening.
- Door seal belt can be replaced.
- Door frame with a unique one-piece design



Removable Tray

Separate body tray with the strong sliding system to make sure easy to pull out and pull back.

Note: All the body trays (mortuary refrigerator, lifting cart, walkin rack) size is the same. Our products are a series of products, the tray is the universal size (same size).



Alarm Function

The alarm function is applicable to the following:

- Unique door seal design for the minimum loss of cold temperature during a door opening.
- Door seal belt can be replaced.
- Door frame with a unique one-piece design



Installation

Unit ships fully assembled; simply plug unit into an outlet and the unit is operational.



Product Specification

Model	ELK-4
Capacity	4 rooms
Product size	2060(L)*1580(W)*1475(H)mm
Packing size	2140(L)*1620(W)*1575(H)mm
Container loading	3 sets/20GP, 7 sets/40GP
Inner size	1950(L)*630(W)*440(H)mm
Body tray	1940(L)*580(W), 8mm thickness, loading: 200kg
Refrigeration system	Single door single control, independent refrigeration system.
Compressor	German SECOP origin compressor
Temperature control	Computer micro-control system, -15 to 5°C, accuracy 0.1°C
Material	S.S304
Steel parameters	Outer thickness 1.0mm, inner thickness 0.8mm, for better cooling performance.
Insulating layer	Polyurethane foam integrated by machine, arc door design. Polyurethane thickness 80mm
Alarm system	7 scenarios, 3 modes alarm
Voltage range	Range: 187-240V, AC, Standard 220V, 50Hz.(110V;60Hz)
Power	872W
Working temperature	10-38°C
Climate	Subtropics
Anti-shock level	Class 1

